

# INSTALLATION INSTRUCTIONS

IMPORTANT DISCONNECT ELECTRICAL SUPPLY BEFORE RELAMPING OR SERVICING  
ELECTRICAL SUPPLY SEE BALLAST OR LAMP.



## TREBEM

These instructions refer to the installation of the Trebem Bollard. Please note that this product comes pre-wired with a 3-core flex (HO5RNF)

For any replacement parts please contact DWW

1) Ensure you have the correct equipment to safely manoeuvre the product into position.

**IMPORTANT WIRING CODE**  
L = LIVE, N = NEUTRAL, E = EARTH.  
THIS LANTERN MUST BE EARTHED,  
THIS IS IMPORTANT

2) To remove the cover simply loosen the 2 security screws in fig 3 and left the cover off.

3) Once removed you will have access to the bollards electrical components.


### Trebem Weights.

1m Flanged	45kg
1m Rooted	47kg
2.2m Flanged	86kg
2.2m Rooted	88kg

### **IMPORTANT!**


When installing the rooted version, a suitable 'Pad' should be positioned at the base of the 'Trebem' to ensure it's stability whilst the concrete foundations harden.

 ( fig 1 )




FLANGED VERSION

( fig 2 )

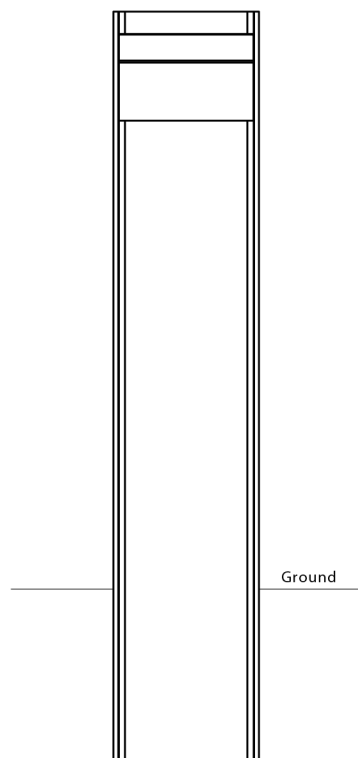


ROOTED VERSION

( fig 3 )

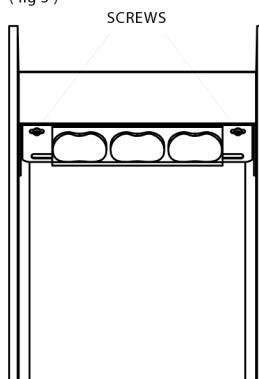

SCREWS

( fig 4 )

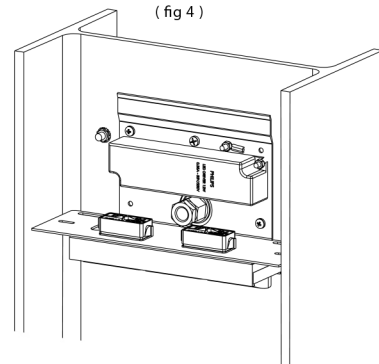

DW Windsor Lighting  
Pindar Road, Hoddesdon, Hertfordshire, EN11 0DX  
Tel: 01992 474600 Fax: 01992 474601  
E-mail: [info@dwwindsor.co.uk](mailto:info@dwwindsor.co.uk)  
[www.dwwindsor.co.uk](http://www.dwwindsor.co.uk)