

INSTALLATION INSTRUCTIONS

IMPORTANT DISCONNECT ELECTRICAL SUPPLY BEFORE RELAMPING OR SERVICING
ELECTRICAL SUPPLY SEE BALLAST OR LAMP.



TREBEM

These instructions refer to the installation of the Trebem Bollard. Please note that this product comes pre-wired with a 3-core flex (HO5RNF)

For any replacement parts please contact DWW

NOTE: This product is a CLASS 1 luminaire and must be earthed at all times.

1) Ensure bollard foundation includes cable conduit and space for appropriate sized IP68 enclosure (not supplied). Install the IP68 enclosure to the manufacturer's instructions in a sufficient sized pit with adequate drainage. See Fig. 1 for details.

2) Ensure you have the correct equipment to safely manoeuvre the product into position.

IMPORTANT WIRING CODE
L = LIVE, N = NEUTRAL, E = EARTH.
THIS LANTERN MUST BE EARTHED,
THIS IS IMPORTANT

3) To remove the cover simply loosen the 2 security screws in fig 4 and left the cover off.

4) Once removed you will have access to the bollards electrical components.

Trebem Weights.

1m Flanged	45kg
1m Rooted	47kg
2.2m Flanged	86kg
2.2m Rooted	88kg

IMPORTANT!

When installing the rooted version, a suitable 'Pad' should be positioned at the base of the 'Trebem' to ensure it's stability whilst the concrete foundations harden.

DW Windsor Lighting
Pindar Road, Hoddesdon, Hertfordshire, EN11 0DX
Tel: 01992 474600 Fax: 01992 474601
E-mail: info@dwwindsor.co.uk
www.dwwindsor.co.uk

