
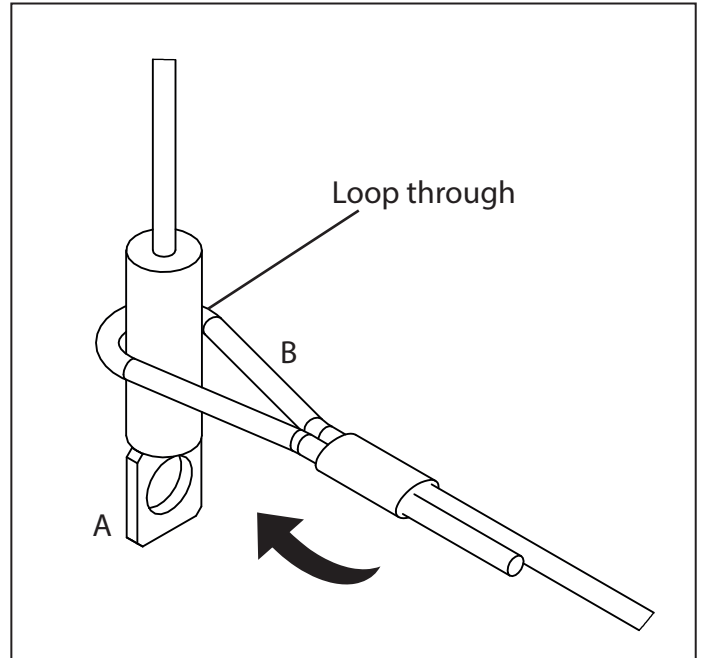


## Step 1

Loop tether in to Kirium Pro 3 as shown and then pass end connector (A) through looped end (B) of tether

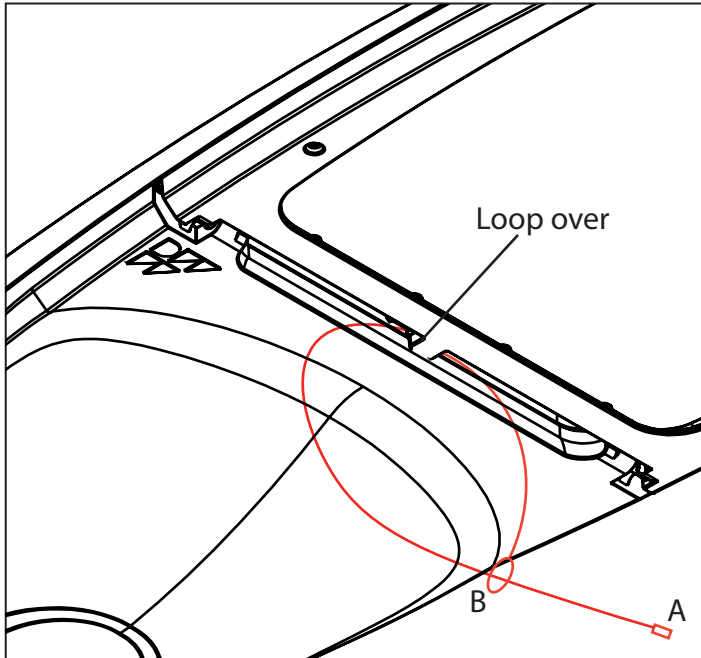

## Step 2

Attach Arm Bracket (C) to arm and attached End Connector (A) to it secured with Shakeproof x 2 washers

